

Firmware Update for Elinchrom Flash units

Information

The latest EL-Skyport firmware updater or software is available as a download from our website: [Elinchrom Support](#) (search for “Software”).

Install the Elinchrom software and run the application.


The Application will check automatically (Internet connection is needed) if an update for the selected / connected unit is available!

How to get the firmware revision of your Elinchrom Unit

Switch on your Elinchrom flash unit and the display shows shortly, whilst starting up the actual Firmware revision (i.e. “r.2”).

Elinchrom Firmware Update (via EL-Skyport Software 3.2)

1. Switch your Elinchrom unit ON (check correct frequency channel on your unit or module and the EL-Skyport Software)
2. Connect the correct EL-Skyport USB module to your computer, start the Updater (EL-Skyport Software)
3. Select the unit you want to update in the EL-Skyport software navigator window
4. Select **EXTRAS - Update Firmware** of the menu (only active if the unit can be updated)
5. Now the unit must be switched manually to the **“Update- Mode” => check table!**
6. In the EL-Skyport software press "Retry" to detect the unit again.
7. The Firmware Update window is displayed
8. Then select **“Update Firmware”**, select the new Elinchrom Firmware file and start the update
9. Follow the instructions and wait until the update process is finished.

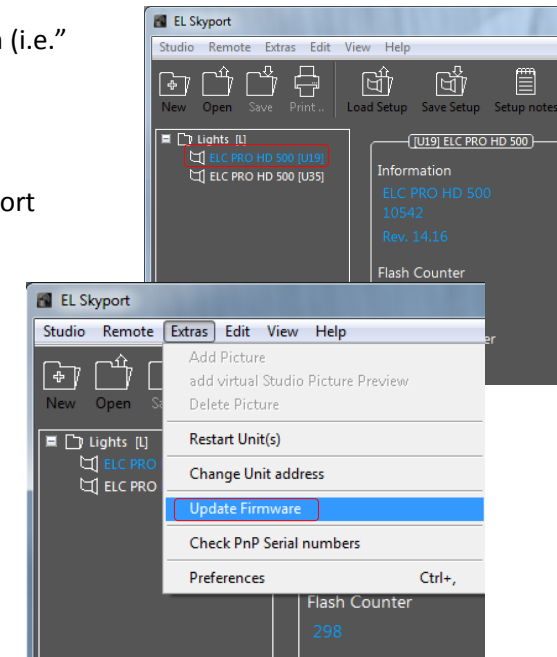















ATTENTION:




- **Do not interrupt the Firmware update process!**
- **Ensure that the battery charger is connected correctly for battery supplied flash units whilst the Firmware update is in process!**

Your Elinchrom Team

Firmware Update for Elinchrom Flash units

Elinchrom Flash Unit	Enter Update Mode	Requirements	Information
D-Lite RX One	Hold Modeling button and also Power-up button and switch the Elinchrom flash unit ON until the LED shows "Ud" then release the buttons  +  +  + hold 3 seconds	 EL-Skyport Software 3.2 +  EL-Skyport USB Speed or  EL-Skyport USB Speed Mk-II	Wireless Update procedure via EL-Skyport. The EL-Skyport Software can check available Firmware updates for the selected Elinchrom unit. In the menu bar under "Extras" you will find "Update Firmware". Follow the instructions to update your Elinchrom unit.
D-Lite RX 200 / 400			
BRX 250 / 500			
FRX 200 / 400			
Master RX 600			
EL-Skyport Universal Speed	Press ON/OFF button for minimum 20 seconds until the LED flashes regularly.  ON/OFF switch + hold 20 seconds		
EL-Skyport WiFi	Switch ON the module and wait until Configuration (approx. 5 seconds), then press ON/OFF button for minimum 15 seconds until the LED flashes regularly On/Off Button Mode Button  + hold 15 seconds		
Ranger Quadra RX (AS)	Switch the Unit OFF, hold the Modeling button and press also ON until the display shows "Ud"		
Ranger Quadra Hybrid	 +  + hold 3 seconds		
ELC Pro HD 500 / 1000	Switch the Unit OFF, hold the USER button and press also ON until the display shows "firmware update"  +  + hold 3 seconds	 EL-Skyport Software 3.2 +  EL-Skyport USB Speed Mk-II	

Firmware Update for Elinchrom Flash units

Elinchrom Flash Unit	Enter Update Mode	Requirements	Information
ELB 400	Connect the Unit via the USB cable to your computer  +  + hold 3 seconds	Elinchrom Updater +  USB Cable (USB-A to USB-Micro)	Not available at present! Update via USB-connector and Elinchrom-Updater