 


Screen Views



Work Screen

Shows the the most important settings, once the unit is configured. Displayed automatically after 45 sec of inactivity.

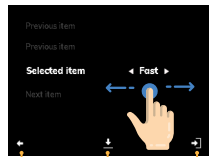

 
Sub-menu Screen

Select feature by scrolling.



Swipe left or right to change value between the arrows


Screen Lock

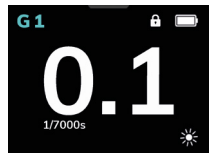

To activate the touch screen lock, press the Menu button, select the Setting wheel and go to Touch and select on / off



 Connection

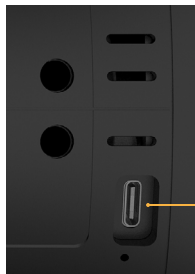

The ONE should only be used between -10°C and 40°C. Only charge the ONE between 0°C and 40°C.

USB-C socket for charge and firmware update.

USB-C Charger

Use only the original Elinchrom One USB Charger to recharge the built-in Li-Ion battery.

When the unit is OFF the side logo color shows the charge status:
Red: recharging
Orange: almost charged
Green: the unit is charged

Recharging time: 100 min. to 100%

Battery capacity min./max power: 9700 / 725 flashes per charged battery.

Reset To Default Settings

Switch the unit on, and release the ON button. When the EL Logo appears press immediately the "ON" and "Menu" button for 4 seconds until the display shows "Reload all default parameters".



www.elinchrom.com



Elinchrom is a registered trademark of ELINCHROM LTD, RENENS, SWITZERLAND

QSG ONE - 09.2021

Av. de Longemalle 11, CH-1020 Renens, Switzerland,
Tel.: + 41 21 637 26 77 Fax: +41 21 637 26 81 E-mail: support@elinchrom.ch

 elinchrom®

ONE



Quick Start Guide

Setup Menu

Action mode
Switch on/off

Settings
Submenu access

Sound
Switch on/off

Photocell
Switch on/off

Settings	Flash before ready	Yes/No
	Flash scale	EL-Scale, 5.8 – 10 (10 scale), Ws
	Modlamp VFC	Off/On
	Modlamp Timer	Off/15*/30*/60"
	Modlamp Scale	F-stop/Percent
	Favorite function	Modlamp/Flash mode/Audio/Photocell/Recycling mode
	Auto stand-by	Off, 1 to 59 min. Auto-off and auto stand-by shall be set independently. Auto stand-by cannot disable auto off.
	Auto-off	Off, (Auto stand-by+1) to 60 min. It shall be longer than Auto stand-by. Minimum value = auto stand-by + 1min.
	EL logo mode	Low, High, Off, Low on ready, High on ready
	EL logo color	Group color, White
	Ready tone	1, 2, 3
	Ready volume	Off, Low, Medium, High
	Keyboard click	Off/On
	Skyport	Off/On
	Touch	Off/On
Wireless update	Setup wifi SSID and password	

To access the menu short tap on screen with 2 fingers

G4 Groups
Swipe to choose the Group

Presets
Select, the color temperature

F20 Frequencies
Swipe to choose the frequency

Background
Switch to black or white


Info

Bluetooth
Switch on/off



Info	Friendly name	Elinchrom ONE standard, can be changed with the computer or smartphone app.
	Firmware rev.	*****
	Skyport ID	*****
	Life time	In hours (hhh:mm)
	Power-on count	How many times the units has been turned on
	Flash count	Total flash number

 Control panel / Touch Screen

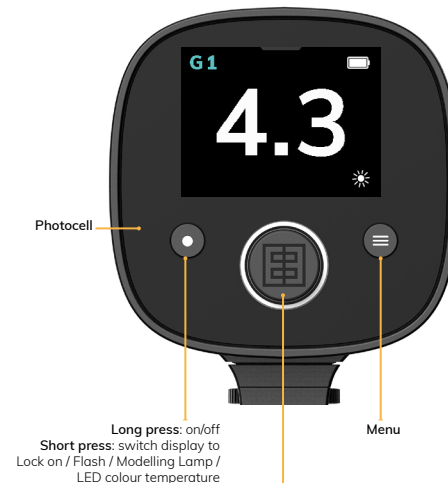

Save button: press for validate your choice

↻ CW: +0.1 f-stop / down

 
↻ CCW: -0.1 f-stop / up

Display panel – Dashboard

The colour of the Group corresponds to the group number : blue for group 1, yellow for group 2, red for group 3 and green for group 4. The Elinchrom logo on the side of the unit illuminates with the color of the selected group.



- Group 1-4
- Modelling lamp menu
- Battery status
- Favorite Function; default setting is Mod. Lamp on/off
- Power value

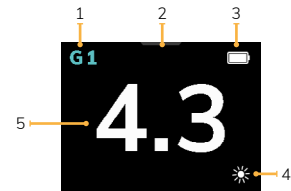

Modelling lamp

Swipe down to access the modelling lamp menu



Short touch to access and change the colour temperature



Swipe left/right to change values

