











Elinchrom Flash Unit	Enter Update Mode	Requirements	Information
ELC Pro HD 500 / 1000	<p>Switch the Unit OFF, hold the USER button and press also ON until the display is in firmware update mode.</p> <p> +  + hold 3 seconds</p> <p>Unit display shows "firmware update". The Update process must run twice, there are 2 Micro controllers to be updated.</p>	<p>Updater Software +</p>  <p>Elinchrom Bridge</p>	<p>Wireless update procedure via the Elinchrom Updater.</p> <p>Follow the instructions on the Updater Software to update your Elinchrom unit.</p>
ELC 125 / 500	<p>Plug the USB cable into the unit and computer, then connect the mains cable and launch the Updater.</p> <p>Unit display shows "USB MODE".</p>	<p>Updater Software</p> <p>+</p>  <p>USB Cable</p> <p>USB-A to USB-Micro USB-A to USB-C for the Elinchrom ONE USB-A to USB-Mini for the Transmitter</p>	<p>Update via USB connector and the Elinchrom Updater.</p>
Elinchrom ONE	<p>Connect the USB-C cable to the computer.</p> <p>Press  (unit off) + connect the USB cable</p> <p>Unit display shows "USB MODE".</p>		
ELB 400	<p>Connect the unit via the USB cable to your computer.</p> <p> +  + hold 3 seconds</p> <p>Unit display shows "USB firmware update".</p>		
ELB 1200	<p>Connect the unit via the USB cable to your computer.</p> <p> +  + hold 3 seconds</p> <p>Unit display shows "firmware update mode".</p>		
ELB 500 TTL	<p>The "Update Mode" is not required.</p>		
Transmitter Pro / Plus HS	<p>Turn your unit OFF, plug the USB cable into the unit and computer, then launch the Updater.</p> <p>Unit display shows "USB MODE".</p>		
Elinchrom Bridge	<p>Plug the USB cable into the Bridge and the computer.</p> <p>Hold  for 5 seconds</p> <p>LED flashes twice every second in yellow. Start Updater.</p>		

Download the Elinchrom Updater Software:

www.elinchrom.com/firmware/