



Menu Functions

All functions are accessible with the following touch buttons:

Menu		Press this button multiple times to select the function you want to setup.
Sub Menu		Press this button to access preselected functions and further sub functions.
Power		Select higher/ lower values.
Master reset	Press together and turn on the unit	

If after 2-5 seconds no other settings have been applied the unit returns to standard mode and the display shows the flash power setting. New settings are stored automatically.

Setting

Photocell – Basic Functions :	Enter into Menu	Toggle sub-menu		Photocell OFF
	Press 1X			Photocell ON
Photocell / Eye-Cell Setup - Anti-Red-Eye Pre-Flash Learning Mode	Press 1X	Set with		Photocell Pre-Flash Mode
				Automatic pre-flash setup
				Photocell / Eye-Cell setup, Preset Mode

Setting

Radio Remote Control / EL-Skyport Basic Functions

Requires the optional EL-Skyport Transmitter 19351

	Enter into Menu	Toggle sub-menu	
EL-Skyport Basic Functions			<p> EL-Skyport Transceiver OFF</p> <p> EL-Skyport Transceiver ON</p> <p> SPEED Function / only available with EL Skyport SPEED</p>
Group Setting	Press 2X 	Press 1X 	<p>Set with </p> <p> To select one of 4 workgroups – adjusting and synchronising individual units or groups. The optional EL-Skyport Transmitters is required to remote and trigger Ranger Quadra. Standard value =1 (Group 1)</p>
Frequency Channel Setup		Press 2X 	<p> Select between 8 Frequency channels – for separate working groups or in case of interference with other wireless systems. The optional EL-Skyport Transmitters is required to remote and trigger Ranger Quadra. Standard value =1 (Frequency Channel 1)</p>
Charge Ready Beep Basic Function	Press 3X 		<p> Charge Ready Beep OFF</p> <p> Charge Ready Beep ON</p>
Charge Ready Beep -ON- Timer Setting		Press 1X 	<p> BEEP -ON- time Setting, chose between value 1 - 7 Standard value = 3</p>
Fast / Slow Recycling	Press 4X 		<p>Set with </p> <p> Fast recycling</p> <p> Slow recycling / About 40% more flashes out of one Battery charge. The slow charge mode also increases the battery lifetime, but the recharging time is doubled!</p>
Auto-OFF - Basic Setup	Press 5X 		<p> "Auto-OFF" OFF</p> <p> "Auto-OFF" ON</p>
Auto-OFF Timer Setup		Press 1X 	<p> Set the Timer shut down time between 1 to 60 minutes</p>
Display in Ws / Joule or F-stop steps	Press 6X 		<p> Display shows flash power in f-stop Elinchrom format.</p> <p> Display shows flash power in Ws / Joule. The Symbol "Ws" LED lights up and indicates that this function is active</p>
Pilotlight LED -ON- Time	Press 7X 		<p> Set the Pilotlight LED Timer between 1..60 seconds</p> <p> To deactivate the Timer for continuous Pilotlight, press this touch more than 3 s. Note: Continuous Pilotlight will consume Battery energy. The number of flashes will be reduced</p>